Ragnarack Installation

Tools Needed: 5 mm allen key, and 13 mm wrench.


Using the provided harware loosely assembly the two side pieces as show in the photo below.



Then loosely attach the side pieces to the main basket.



It is optional to attach the tire biter pieces. They are not neccessary but may help in some applications.

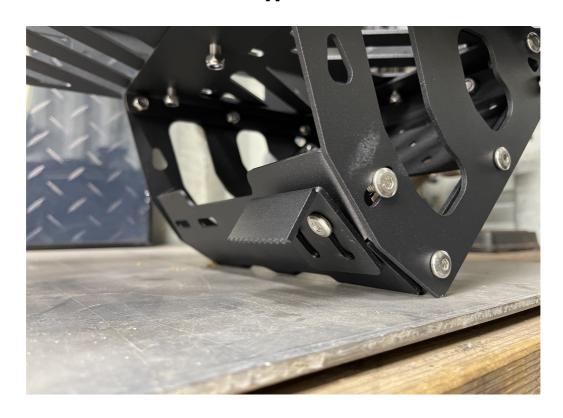

Set the rack on the spare tire and adjust the side panels in to where they are touching the tire firmly and tighten all hardware.



Attach the provided ratchet straps as show and feed them through the holes in the wheel and tighten. Note some adjustment may be needed at this time to ensure the rack sits level and secure.

